
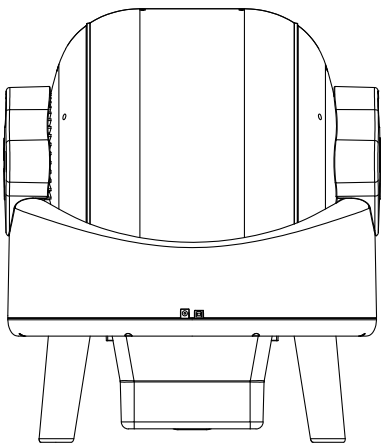


Automatic Cat Litter Box

Model: CH-ICB024

User Manual

**Before using this product, please read the user manual
carefully and store it properly.**

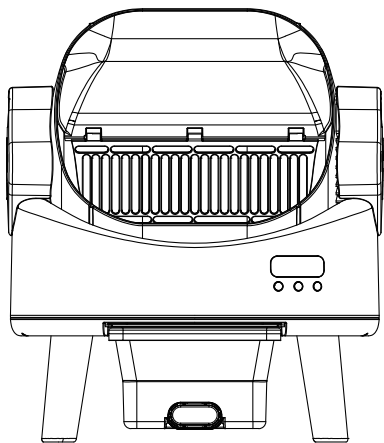

Directory

WiFi network configuration instructions 01

Product introduction

Main structure description 03

List of parts 04

Operating panel 04

Installation instructions

Complete installation 05

Add cat litter 06

Daily Maintenance

Clean the collection bin 07

Rotating drum cleaning 08

Fragrance box replacement 09

Safety warning

Indicates prohibited content 10

Indicates mandatory content 11

Service guide

Product parameter 12

Fault self-test 13

Skill 14

Warranty instructions 15

WiFi network configuration instructions



This product can through the "Tuya Smart" APP

1. Search for "Tuya Smart" App in the mobile app store to download and install.


QR Code iOS:



QR Code Android:



2. Press and hold the cat litter box WiFi button for 3 seconds and a beep will sound

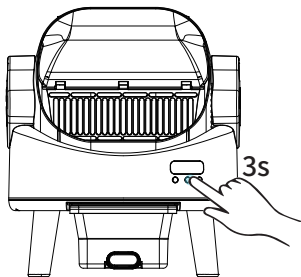


3. Open the APP and click Add Device in the upper right corner



4. Wait for automatic search and discovery of the device



5. Enter the WiFi password

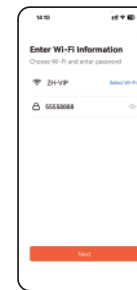

6. Connection to succeed



7. App homepage




Attention!





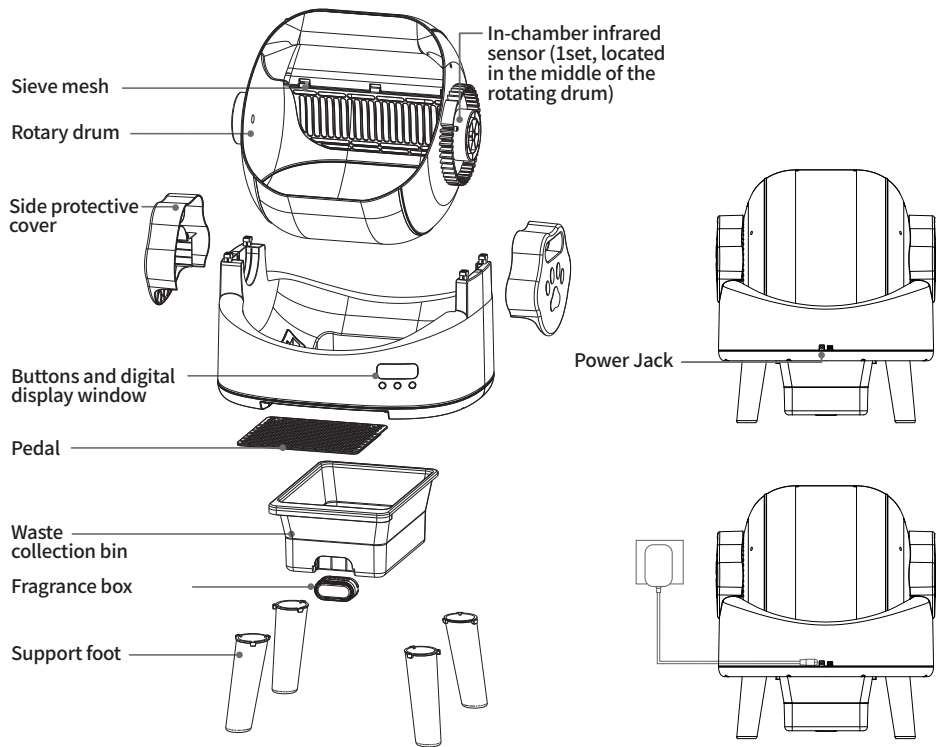


- If the route account or password of a device user is changed, the device cannot connect to the device.
- In this case, perform the preceding steps and hold down the WiFi button for 3 seconds to reconfigure the network.

Product Introduction

Main structure description



List of parts

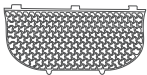 Instruction x1	 Power Adapter x1	 Fragrance box x1	 Garbage bag x1
 Pedal x1	①  Vertical Sieve mesh x1 <small>Use for universal cat litter, include tofu litter</small>	②  Flower Sieve mesh x1 <small>Use with any litter type, except tofu litter</small>	

Operating panel

Cleaning button

- **Usage:** Press once to start cleaning
- **Green light:** In operation
- **Slow-flashing yellow light:** Waste collection bin full

WiFi button

- **Usage:** Press and hold for 3s to configure or deconfigure the network
- **Steady blue light:** Wi-Fi not connected
- **Slow-flashing blue light:** In the process of connecting to the network
- **Green light:** Network connection successful

Emptying button

- **Usage:** Long press for 5 seconds to empty the cat litter
- **Green light:** In operation
- **Slow-flashing yellow light:** Waste collection bin full

Digital display window


- **Number 0:** Start Auto-Clean
- **Number 2:** Anti-pinch activated
- **Number 3:** Waste collection bin full
- **Number 9:** Induction radar activated

Installation Instructions

Complete installation



①. Remove all accessories from the rotary drum.

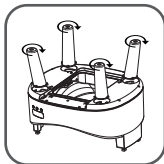


②. Align the red dot on the support foot with the unlock mark at the bottom and counterclockwise to lock.




Tips:

- ① Install: Rotate counterclockwise to "Lock".
- ② Detach: Rotate clockwise to "Open".

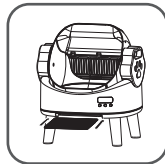


③. Install the pedal by aligning it with the slot at the base of the unit.

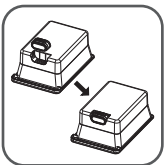

④. Put the fragrance box into the groove at the bottom of the bin.



⑤. Place the trash bag, pull it forward, and secure it.

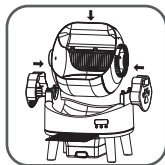


⑥. Install the rotary drum and the side protective cover.


Attention!

- Before installation, please carefully read the instruction manual and check the accompanying accessories.
- For cats under 33lb, please use manual mode.


Add cat litter

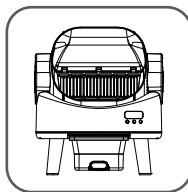

①. Unplug the power and the machine stops running.

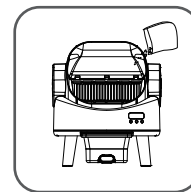

②. Pour an appropriate amount of cat litter. (Recommendation: Use "fine-grained" cat litter like mineral, cassava and blended litter.)

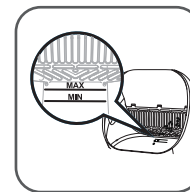

③. The amount of cat litter poured should be between the "MIN" and "MAX" markings.



How to install



How to connect the App




How to clean

Attention!

- Before adding cat litter each time, please unplug the power supply, and plug it back in after adding the litter; alternatively, press the cleaning button briefly once to reset and level the litter after each addition.
- Recommendation: Use "fine-grained" cat litter! It is recommended that the cat litter has a length of no more than 10mm and a diameter of no more than 1.5mm. e.g. mineral, cassava and blended litter.
- If the cat litter level falls below the "MIN" line, please add litter or replace it to prevent clumping.

Daily maintenance


Clean the collection bin

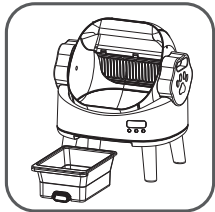

① Pull out the collection bin.



② Remove the trash bag, Seal it tightly.

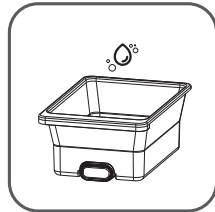


③ Clean the bin with water and install a new one.


Note!

- Maintenance work is not within the scope of maintenance.
- A dedicated sealed fragrance box should be used to ensure the deodorizing effect.
- Matching special garbage bags should be used to ensure the cleaning effect of products.


Rotating drum cleaning

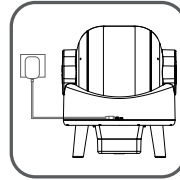


① Cut off the power supply and pull the power adapter out of the back hole of the product.

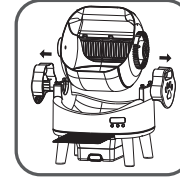


② Grasp the handle holes on both vertical semicircular plastic cases and pull them out horizontally.

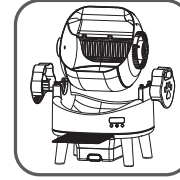


③ Lift out the rotating drum.

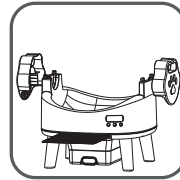


④ Wipe the interior of the product with a damp towel.

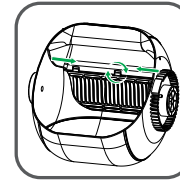


⑤ Locate the sieve mesh inside the rotating drum, grasp its end, pull upward to disengage from the slot and remove.

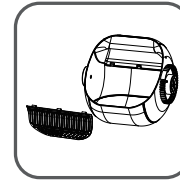

⑥ Take out the sieve mesh.

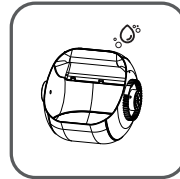


⑦ The rotary drum can be cleaned directly with water.

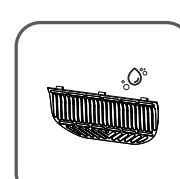

⑧ Clean sieve mesh, install after dry.


Fragrance box replacement

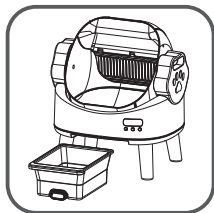


- ① Cut off the power and pull out the bottom waste collection bin.



- ② Take out the garbage bags.

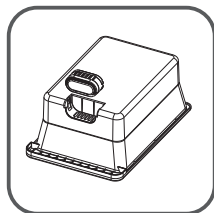

- ③ Turn the waste collection bin upside down on a flat surface and take out the old fragrance box upwards.

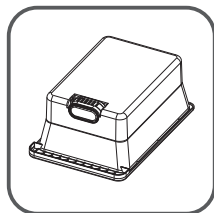

- ④ Replace the new fragrance box and replace the waste collection bin.

Safety warning

Note!

To ensure safety and avoid injury and property damage to yourself and others, please observe the following safety precautions. Misuse may result in accidents.

⊘ Indicates prohibited content



Keep out the sun



No flammable articles



No wet area



Do not touch with wet hands



Avoid washing or submerging the unit in water



Do not place on uneven ground

- The machine should be placed in a cool and dry place in the room. Avoid the place exposed to strong sunlight, otherwise it will easily cause aging of product parts.
- Do not allow young children to handle, touch, approach or climb. Children and people with intellectual disabilities should use it with a guardian.
- Do not use gasoline and other organic solution to wipe the fuselage, the product is strictly prohibited to wash, water. Do not put the product in contact with or near inflammable and explosive materials.
- In order to save electricity, disconnect the corresponding power switch when not in use for a long time, and clean the remaining sand in the machine. Install and fix the machine before it can be used.
- Do not connect the booster transformer to the power plug.
- The machine is not allowed to be used in the place where there is water spraying, and electrical appliances are not allowed to be used in the cabinet. The device should be at least 10cm away from the wall, and no other items should be placed on the bottom and surrounding areas.

! Indicates mandatory content



Need
professionals

- It is strictly prohibited to extend the power cord arbitrarily to avoid fire
- If the power cord is damaged, it must be replaced by the manufacturer, maintenance department or professionals to avoid danger

⚠ May cause minor injury or damage to property

- When cutting off the power supply, do not pull the power cord directly to prevent it from being broken. Keep flammable and volatile substances away from the machine.
- In the transportation and loading and unloading process, should be handled lightly to prevent a collision scratch products and accessories.
- The machine shall not be installed outdoors. Should be placed in a ventilated, dry, temperature of 4-40°C, relative humidity does not exceed 60%, and in an environment without corrosive gases.
- After the machine is out of service, empty the cat litter in the bucket and the cat feces in the collection bin.
- Keep the power plug clean. Do not insert or remove the power plug with wet hands.
- There will be slight vibration and noise when the drum is rotating, which is a normal phenomenon.
- Wet or dusty areas may cause circuit damage. High magnetic appliances are nearby will may cause fire, product damage or circuit failure.
- When moving the product, handle it gently and avoid dragging it.
- Do not place other items on the top of the product, which may affect the normal work of the product.
- The product can only be used on the special accessories provided by our company.

Precautions and Troubleshooting Causes for Networking Failure:

- To ensure smooth networking of the product, please ensure that the whole machine is installed in a place with strong wireless network.
- This equipment contains a radio transmitting module with model approval code CMITID: 2020DP6462 and device model: WBR3.

Service guide

Product parameter

Due to product improvement, the following parameters are subject to change, so the final product nameplate shall prevail.

Product Name	Automatic Cat Litter Box
Model	CH-ICB024
Product Material	ABS, PP
MEAS	460*539*380 mm
G.W.	19.8 LBS
Rated Power	9 W
Rated Input Voltage	DC 12 V
Maximum Input Current	1.5 A
Scope of Application	Kittens and families with multiple cats and pets

MADE IN CHINA



Fault self-test

Note!

The following is the common judgment and inspection, if simple treatment cannot be eliminated, please send to the maintenance network or call the customer service hotline for consultation. Please do not disassemble and repair by yourself to avoid danger or cause damage to the product.

Problem	Cause	Treatment method
Networking failure	<ul style="list-style-type: none">The product is not energizedNo network exists in the place where the product is locatedThe phone did not turn on BluetoothWiFi is not a 24G signal	<ul style="list-style-type: none">Electrify the productCheck whether there is a networkTurn on BluetoothWiFi is adjusted to 24G signalPress and hold the Wi-Fi button to refresh the network
The product is energized, and the drum does not rotate	<ul style="list-style-type: none">Product accessories are not installed in placeThe required adapter is not used	<ul style="list-style-type: none">Check and reinstall product accessoriesCheck that the adapter power matches that of the machine nameplate
The digital display shows the number 0, and the drum does not rotate	<ul style="list-style-type: none">Delayed waste removal (protection mechanism)	<ul style="list-style-type: none">Please confirm that the cat has left the litter box, and then wait for the product to clean automatically
The digital display shows the number 2, and the drum does not rotate	<ul style="list-style-type: none">The infrared sensor inside the drum is blocked (anti-pinch protection activated)	<ul style="list-style-type: none">Check if there is any foreign matter blocking the infrared sensors on both sides of the rotating drum. Clean it off to restore normal operation
The digital display shows the number 3, and the drum does not rotate	<ul style="list-style-type: none">The infrared sensor of the waste collection bin is blocked	<ul style="list-style-type: none">Check if the waste collection bin is full, or if there is any foreign matter blocking the infrared sensor beads on both sides. Clean them up to restore normal operation
The digital display shows the number 9, and the drum does not rotate	<ul style="list-style-type: none">Microwave radar trigger (when a person or cat approaches the "rim plane" area)	<ul style="list-style-type: none">When a person or cat leaves the "rim plane" area, the equipment returns to normal.

Skills:

1. The machine is placed on a flat hard ground, and there are four black parts on the bottom that should be in contact with the same plane.
2. Make sure the cat weighs more than 1kg, otherwise it may cause the cat to be injured.

Dear Valued Customer,

Thank you for choosing the Linvivon Automatic Cat Litter Box. Before using this product, please carefully read and follow the user manual. By installing or using this product, you acknowledge that you have read and accepted the following safety instructions.

Linvivon assumes no liability for accidents or injuries resulting from improper use. The company reserves the right to interpret and revise these instructions at any time.

WARRANTY & CUSTOMER SERVICE

We offer a 100% satisfaction guarantee and 12 months warranty! If you have any questions about this product, please feel free to contact us at **support@ilinvivon.com**

24 Hours Customer Support: Linvivon Customer Service Team

Mail: support@ilinvivon.com

MADE IN CHINA

The following situations are not covered under warranty:

1. Damage caused by improper use, storage and maintenance of consumers.
2. Damage caused by disassembly and repair without the company's designated maintenance department.
3. The model of the invoice is inconsistent with the model of the maintenance product or altered.
4. No valid invoice.
5. Force majeure causes damage.
6. We are not responsible for the quality accidents caused by the non-standard gifts or accessories of our company.
7. Failure caused by human or improper use is not covered by warranty.
8. Please use the spare parts provided by our company. Old parts cannot be reused.

Note!

Technical improvements to the product will be incorporated into the new version of the manual without prior notice. Any changes to the product's appearance or color shall be subject to the actual product.